

Multimedia Classroom Instructions

If you are having technical difficulties, please call Multimedia Services immediately at **953-7245**, M-F 8am – 5pm.
Or, put in a **Hotline** by typing the word “hotline” in the URL address field of your browser.

1. Turn **ON** the Computer

- a. **Press** the power button on the computer.
- b. **Type lab** in the Username field of the Novell login, no password is needed.*
- c. **Click** OK.

2. Turn **ON** the Projector

- a. **Aim** the remote directly at the projector, or the projection screen.
- b. **Click** the **red button once**. It is located on the left top of the projector remote control.

3. Turn **ON** the Document Camera

- a. **Pull** the main lock button towards you to raise the main support.
- b. **Turn** the lens downward to face the light box.
- c. **Remove** the lens cap.
- d. **Raise** the lamp units located on the right and left of the document camera, and adjust the angle of the lamps to suit your needs.
- e. **Press** the **Power** button located on the document camera.
- f. **Place** the object on the light box.
- g. **Press** the **Lamp** button to switch between the top light (for books, paper, etc.) and the bottom light (for transparencies).
- h. **Press** the **RGB** button on the projector remote control until you get to the “RGB2” mode.**

4. To View the Document Camera on the Computer Monitor

- a. **Go** to Start → Programs → Samsung SDP-950
- b. The document camera image will appear on the monitor.

5. Turn **ON** the DVD/VCR

- a. **Press** the **Power** button on the DVD/VCR.
- b. **Put** in your DVD or VHS tape.
- c. **Press** the **DVD/VCR** button to switch between the DVD player and the VHS player.
- d. **Press** the **Play** button to start the DVD or VHS tape.
- e. **Press** the **Video** button on the projector remote control until you get to the “Video” mode.**

6. To use your Laptop

(Please note that the document camera has to be turned on for the laptop to work.)

- a. **Locate** the VGA connection on the podium desktop.
- b. **Connect** the laptop to the VGA connection. (The VGA cable is available from the department.)
- c. **Turn ON** your laptop.
- d. **Push** the **INT/EXT** button on the document camera.
(This will toggle the image between the document camera and your laptop.)

* If you prefer to use your personal CitNet/Novell login information, type in your information in the Novell login and click OK. Another login screen will appear. Type **lab** in the Name field, but do not type in a password.

** When you want to switch back to the computer, press the RGB button on the projector remote control until you get to the “RGB1” mode.

**Please remember to shut down the equipment, put all of the remotes inside the podium,
and lock the podium when you are finished with the room.**

Thank you.

Multimedia Classroom Instructions

Troubleshooting Multimedia Equipment

Computer Not Showing On Screen:

- Make sure the projector is on.
- On the projector remote control, press the RGB button until you get to the "RGB1" mode.

Document Camera Not Showing On Screen:

- Make sure the projector is on.
- On the projector remote control, press the RGB button until you get to the "RGB2" mode.

Video Not Showing On Screen:

- Make sure the projector is on.
- On the projector remote control, press the Video button until you get to the "Video" mode.

Projector Not Responding To Remote Control:

- Move the switch on the end of the remote from Computer to Projector.

No Sound

- Make sure the sound amplifier is turned on.
- Turn up the appropriate volume control.

**If you have checked all of the above, and you are still having problems,
please call Multimedia Services at 953-7245 or put in a hotline.**

**Please remember to shut down the equipment, put all of the remotes inside the podium,
and lock the podium when you are finished with the room.**

Thank you.